

POWERWAVE
ACCESSORIES

 
CORE WIRELESS CONTROLLER

INSTRUCTIONS



Contents

PRODUCT OVERVIEW	2
PRODUCT LAYOUT.....	2
SYNCING INSTRUCTIONS	3
NINTENDO SWITCH – WIRELESS CONNECTION.....	3
NINTENDO SWITCH – WIRED CONNECTION.....	4
ANDROID – WIRELESS GAMEPAD CONNECTION	4
IOS – WIRELESS CONNECTION.....	4
ANDROID – WIRELESS CUSTOMISATION CONNECTION	4
LAPTOP – WIRELESS CONNECTION.....	4
PC – WIRED CONNECTION.....	5
PS3 & SMART TV – WIRED CONNECTION	5
TURBO FUNCTION	5
MOTOR VIBRATION ADJUSTMENT	6
CHARGING, POWER ON & POWER OFF	6
PRODUCT SPECIFICATIONS.....	6
PRODUCT CARE AND SAFETY	7

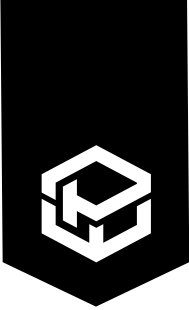


CORE WIRELESS CONTROLLER


INSTRUCTIONS

Product Overview

The Powerwave Nintendo Switch Core Wireless Controller can be used with Nintendo Switch™, PC, Android, IOS, Smart TV and PS3. Features include one-key awakening for Nintendo Switch, six axis gyroscope, adjustable motor vibration, turbo functionality and ergonomic design.

  Product Layout

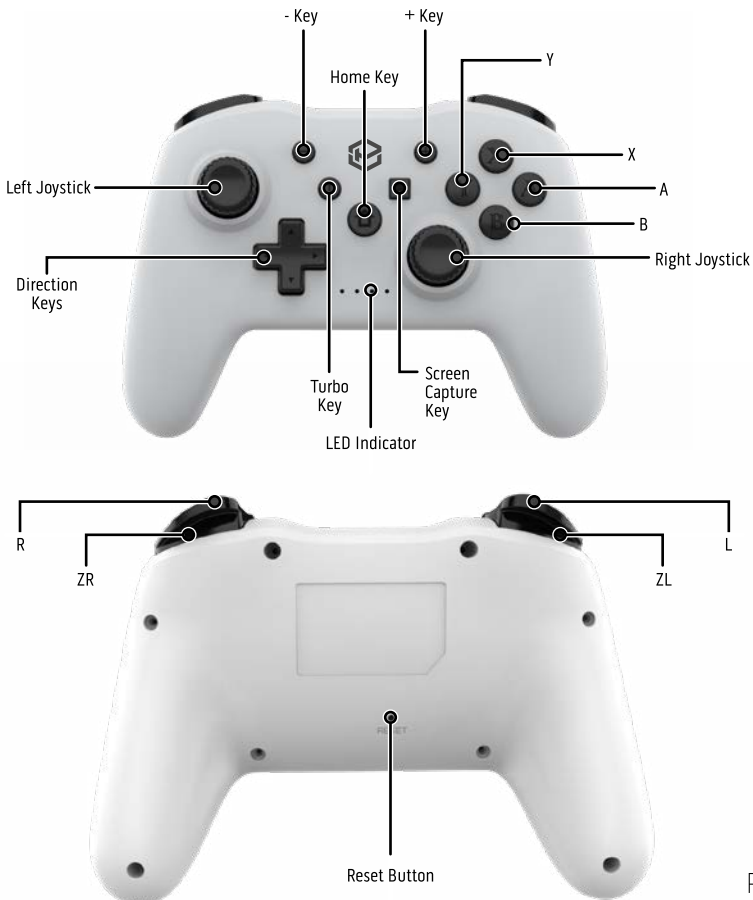

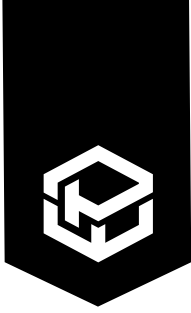

CORE WIRELESS CONTROLLER

 
INSTRUCTIONS

Syncing Instructions

Nintendo Switch – Wireless Connection

- Press the B & HOME buttons for 3 seconds to enter pairing mode.
- Follow the instructions below to pair the controller to console.
- Once successfully paired, when the controller and console have been idle, pressing the HOME button will automatically wake up the console and reconnect.

1. Select 'Controller' on your Nintendo Switch™ homepage.

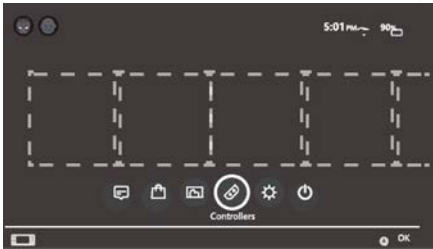


2. Select 'Change Grip/Order'.



 3. Follow instructions on screen to complete connection.



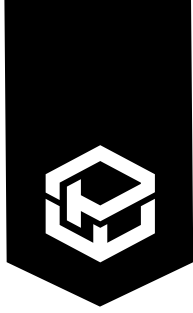

CORE WIRELESS CONTROLLER

INSTRUCTIONS

Syncing Instructions

Nintendo Switch – Wired Connection

- Use the provided USB-C cable to connect the controller to a USB port on the Nintendo Switch dock.
- The LED indicator light corresponding to the controller player number will remain solid once connected.

Android – Wireless Gamepad Connection

- Press the X + HOME buttons simultaneously for 3 seconds to enter pairing mode. The second and third LED indicator lights will flash in pairing mode.
- Search for the Bluetooth device "Gamepad" under Bluetooth devices.
- The second and third LED indicator light will remain solid once connected.

IOS – Wireless Connection

 
- Press the Y + HOME buttons simultaneously for 3 seconds to enter pairing mode. The first and fourth LED indicator lights will flash in pairing mode.
- Search for the Bluetooth device "DUALSHOCK 4" under Bluetooth devices.
- The first and fourth LED indicator light will remain solid once connected.

Android – Wireless Customisation Connection

- Press the "+" + HOME buttons simultaneously for 3 seconds to enter pairing mode. The third and fourth LED indicator lights will flash in pairing mode.
- Search for the Bluetooth device "QMacro" under Bluetooth devices.
- Download the "QMacro" software app and open, allowing the floating overlay option.
- Enter the selected game, and once running, open the "QMacro" software and select game training mode.
- When setting buttons, press the selected button first and the corresponding button in the software will display. Drag the button to the desired position on screen to set the customisation.
- The floating icons call out the key settings, and carry out the functions of each key as determined by your preferences. Once your customisation is completed, click "Save" & "Close."

Laptop – Wireless Connection

- Press the A + HOME buttons simultaneously for 3 seconds to enter pairing mode. The second and third LED indicator lights will flash in pairing mode.
- Search for the Bluetooth device "Gamepad" under Bluetooth devices.
- The second and third LED indicator light will remain solid once connected.

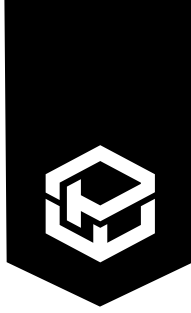

CORE WIRELESS CONTROLLER

INSTRUCTIONS

Syncing Instructions

PC – Wired Connection

- Use the provided USB-C cable to connect the controller to a USB port on the PC.
- The default mode is X-INPUT. The first LED indicator light will remain solid once connected.
- To change to D-INPUT, hold the “-” & “+” buttons simultaneously for 5 seconds. The second and third LED indicator lights will remain solid in D-INPUT mode.

PS3 & Smart TV – Wired Connection

- Use the provided USB-C cable to connect the controller to a USB port on the PS3 or Smart TV.
- The LED indicator light corresponding to the controller player number will remain solid once connected.

Turbo Function

- The following buttons are supported for Turbo functionality: **A, B, X, Y, R, ZR, L & ZL**

Setting Turbo

 
- Hold down the supported button you wish to activate Turbo on, and briefly press the Turbo button once to activate semi-automatic Turbo (burst fire when selected button is pressed).
- Repeating this step again will activate fully-automatic Turbo on the supported selected button. This means pressing the selected button will continue to fire until released.
- Repeating this step a third time will clear Turbo functionality from the selected button.

Clearing All Turbo

- Press and hold the DOWN ARROW button and the “-” (MINUS) button simultaneously. The controller will vibrate to indicate all Turbo functionality has been cleared.

Turbo Speed Adjustment

- Low Speed: 5 Bursts Per Second.
- Medium Speed: 10 Bursts Per Second.
- High Speed: 20 Bursts Per Second.
- Default Turbo speed is Medium Speed.
- To adjust up, press Turbo & the Up Directional buttons simultaneously until the controller vibrates.
- To adjust down, press Turbo & the Down Directional buttons simultaneously until the controller vibrates.

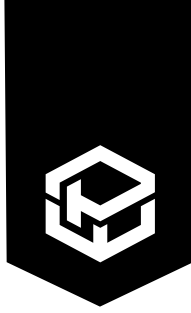

CORE WIRELESS CONTROLLER

INSTRUCTIONS

Motor Vibration Adjustment


- To turn off controller vibration, please select this option in System Settings;
HOME Menu > System Settings > Controllers & Sensors > Controller Vibration
- There are 3 vibration intensity settings – Weak, Medium, Strong.
- To adjust controller vibration, press and hold the Z, ZL, R & ZR buttons simultaneously until the controller vibrates. Each adjustment will cycle through the 3 available intensity modes.

Charging, Power On & Power Off

- When the controller is low on charge, the LED lights will flash quickly.
- Plug the provided USB-C cable into an available USB port and the controller.
- When charging, the LED lights will flash slowly.
- When fully charged, the LED light will remain on.
- Holding the HOME button for 5 seconds will power the controller off.
- To power on, press the HOME button.
- To reset, carefully insert a thin object such as a paperclip into the RESET button on the back of the controller.

Product Specifications

Battery	600mAh Rechargeable Battery
Input Voltage	DC5V / 500mA
Working Voltage	DC 3.7V / 20mA
Usage Time	>10H
Charging Time	Approx. 2H
Bluetooth 4.0 Distance	Up to 8M
Standby Time	Up to 50 Days
Type-C Cable Length	80CM
Compatibility	Nintendo Switch / PC Windows 7 + / Android 6.0 + / IOS 13 + / PS3

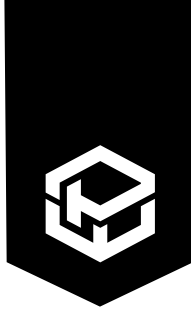 

CORE WIRELESS CONTROLLER

INSTRUCTIONS

Product Care and Safety

- Keep your user manual for future reference.
- Use this device solely for its intended purposes.
- Please use the included USB cable.
- For indoor use only.
- Keep away from hot surfaces and naked flames.
- Do not expose this product to any liquids.
- Do not use external heating equipment to dry device.
- When not in use, store in a cool, dry environment away from direct sunlight.
- Do not apply force or put heavy objects onto the product.
- If the product is damaged, broken or immersed in water, stop use immediately.
- Do not attempt to repair, modify or disassemble the product.
- Clean with a soft, dry cloth to prevent dirt build-up. Do not use chemical solvents, detergents or alcohol.
- Keep out of reach of small children.