




**POWERWAVE**  
A C C E S S O R I E S

# CHARGING GRIP WITH BATTERY

INSTRUCTIONS

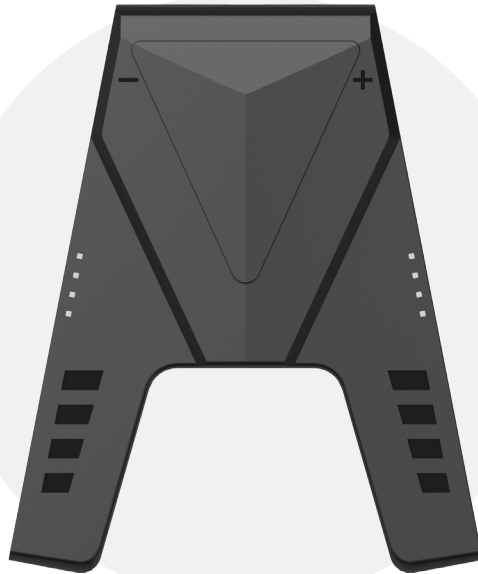

## Contents

PRODUCT OVERVIEW .....	2
LAYOUT .....	2
OPERATING INSTRUCTIONS .....	3
CONTENTS .....	3
PRODUCT CARE AND SAFETY .....	3




# CHARGING GRIP WITH BATTERY

## INSTRUCTIONS

### Product Overview

Enhance your gaming experience with the Powerwave Charging Grip with Battery. The built-in battery allows you to conveniently keep your controllers charged during gaming sessions while the convenient LED indicators show battery status and charging progress at a glance. The magnetic connectors keep your controllers attached securely and the V-shape design ensures a comfortable and familiar grip.

### Layout

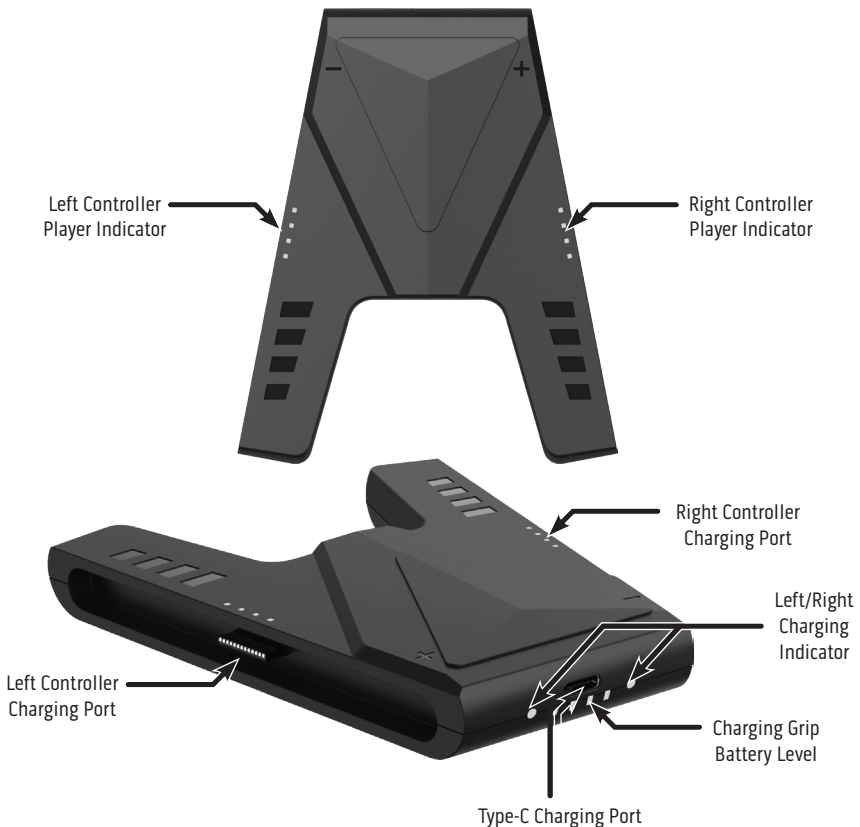



# CHARGING GRIP WITH BATTERY

## INSTRUCTIONS

### Operating Instructions

- Fully charge your Charging Grip before first use
- Connect your controllers using the magnetic charging port
- The Charging Grip Battery Level Indicator light should be on. If it is not, press the power button on the back of your Charging Grip
- The Charging indicator lights on top of your Charging Grip will illuminate Red when charging your Joy-Cons and Green when they are fully charged

### Contents

1x Charging Grip with Battery

### Product Care and Safety

- Keep your user manual for future reference.
- Use this device solely for its intended purposes.
- For indoor use only.
- Keep away from hot surfaces and naked flames and liquids.
- When not in use, store in a cool, dry environment away from direct sunlight.
- Do not apply force or put heavy objects onto the product.
- If the product is damaged, broken or immersed in water, stop use immediately.
- Do not attempt to repair, modify or disassemble the product.
- Clean with a soft, dry cloth to prevent dirt build-up. Do not use chemical solvents, detergents or alcohol.
- Keep out of reach of small children.