



POWERWAVE
A C C E S S O R I E S

COMPACT DUAL CHARGING STAND

INSTRUCTIONS



Contents

PRODUCT OVERVIEW	2
LAYOUT	2
OPERATING INSTRUCTIONS	2
CONTENTS	3
PRODUCT CARE AND SAFETY	3




COMPACT DUAL CHARGING STAND

INSTRUCTIONS

Product Overview

The Powerwave Compact Dual Charging Stand is the perfect pocket-sized charging solution for use at home or on the go. Featuring a folding kickstand, this charger can be positioned upright or flat, allowing for charging in either position. LED indicators provide clear visibility of charging status.

Layout

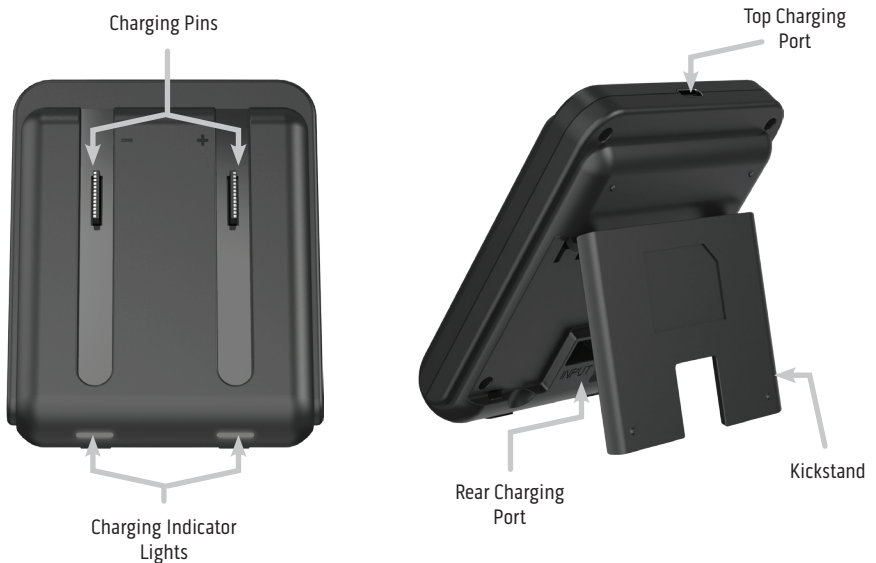

Operating Instructions

- Connect your Charging Stand to power using the included USB-C Cable.
- Connect your Joy-Cons to the Charging Stand, ensuring that the left and right Joy-Cons are on the correct side, indicated by the “-” and “+” symbols on the Stand.
- Your Joy-Cons will now be charging, charging status can be seen on the bottom of the stand. The indicator lights will display red when charging and green when fully charged.



POWERWAVE
ACCESSORIES

COMPACT DUAL CHARGING STAND

INSTRUCTIONS

Contents

1x Compact Dual Charging Stand

1x USB-C Charging Cable

Product Care and Safety

- Keep your user manual for future reference.
- Use this device solely for its intended purposes.
- For indoor use only.
- Keep away from hot surfaces and naked flames and liquids.
- When not in use, store in a cool, dry environment away from direct sunlight.
- Do not apply force or put heavy objects onto the product.
- If the product is damaged, broken or immersed in water, stop use immediately.
- Do not attempt to repair, modify or disassemble the product.
- Clean with a soft, dry cloth to prevent dirt build-up. Do not use chemical solvents, detergents or alcohol.
- Keep out of reach of small children.