



INSTRUCTIONS

ELITE ERGO GRIP



Contents

PRODUCT OVERVIEW	2
LAYOUT	2
CONTENTS	2
OPERATING INSTRUCTIONS	3
PRODUCT CARE AND SAFETY	3



POWERWAVE

ELITE ERGO GRIP

INSTRUCTIONS

Product Overview

Designed for comfort the Powerwave Elite Ergo Grip is the perfect accessory for handheld play. The slider design allows the included two pairs of grips to be easily changed to suit your preference. The removeable cartridge holder can store up to six cartridges, ensuring that you always have your favourite games on hand.

Layout



Contents

1x Elite Ergo Grip Body 1x Pair of Pro Grips

1x Pair of Comfort Grips



POWERWAVE

ELITE ERGO GRIP

INSTRUCTIONS

Product Care and Safety

- Keep your user manual for future reference.
- Use this device solely for its intended purposes.
- For indoor use only.
- Keep away from hot surfaces and naked flames and liquids.
- When not in use, store in a cool, dry environment away from direct sunlight.
- Do not apply force or put heavy objects onto the product.
- If the product is damaged, broken or immersed in water, stop use immediately.
- Do not attempt to repair, modify or disassemble the product.
- Clean with a soft, dry cloth to prevent dirt build-up. Do not use chemical solvents, detergents or alcohol.
- Keep out of reach of small children.

Operating Instructions

- DO NOT SLIDE your console and Joy-Cons directly into the Elite Ergo Grip. Follow the below instructions to attach to your console
- Attach your Joy-Cons to your console
- Place the left Joy-Con into the Elite Ergo Case so it is sitting against the edge of the case
- Gently fold back the right side of the case and bring it forward until it folds over the right Joy-Con





- The back grips and game card holder can be attached by sliding along the rails on the back of the
 ergo grip until they click into place
- The back grips and game card holder can be detached by sliding in the opposite direction