 


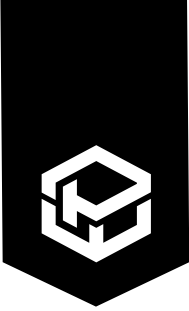

Contents

PRODUCT OVERVIEW	2
PRODUCT LAYOUT	2
CHARGING INSTRUCTIONS	2
SYNCING INSTRUCTIONS	3
CLOUD GAMING – ANDROID & IOS	3
ANDROID GAMES – ANDROID	4
NINTENDO SWITCH – SWITCH, OLED & LITE	5
PC CONNECTION – WIRED	6
KEY CONFIGURATION – ANDROID CUSTOM GAME MODE	7
AVAILABLE GAME MODE SYNC OPTIONS	8
RGB LIGHTING SETTINGS	8
TURBO SETTINGS	8
PRODUCT SPECIFICATIONS	9
PRODUCT CARE AND SAFETY	9



 
MOBILE GAMING CONTROLLER

 
INSTRUCTIONS

Product Overview

Upgrade your gaming experience with the Powerwave Mobile Gaming Controller. Featuring an adjustable backplate to suit mobile phones and Nintendo Switch, easily connect wirelessly to your gaming device of choice via Bluetooth and game anywhere, anytime!

Never run out of charge again with a built-in rechargeable battery and enjoy turbo functionality, mechanical buttons, RGB backlighting and dual vibration. Supports cloud gaming on Android & iOS and key configuration for Android.

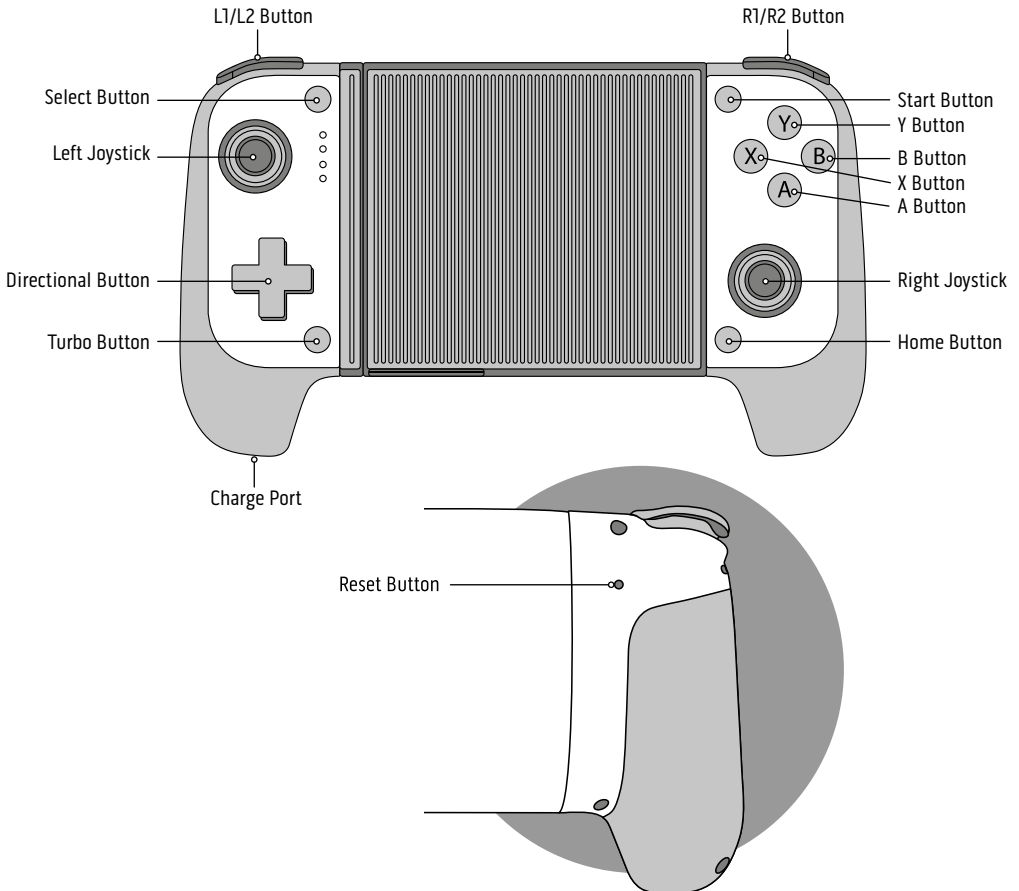

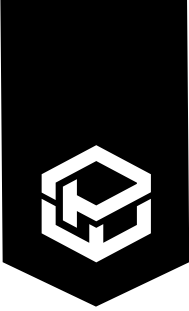

MOBILE GAMING CONTROLLER

INSTRUCTIONS

 
Charging Instructions

- Connect the controller using the provided USB-C cable into a 5V AC Adapter or available USB port.
- LED 4 will flash slowly to indicate the controller is charging.
- LED 4 will remaining solid once fully charged.

Syncing Instructions


CLOUD GAMING – Android & iOS

Using your controller through gaming apps such as Xbox Game Pass & PS Remote Play.

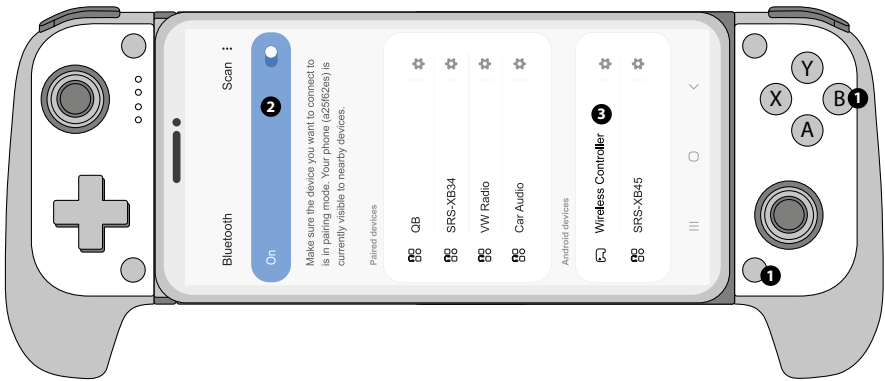

- Press the B & HOME buttons together.
- LED 4 will flash to indicate pairing mode.
- Within phone settings switch Bluetooth to 'On.'
- Controller will be named 'Wireless Controller' on Android and 'DUALSHOCK 4' on iOS.
- Click the controller name to pair and connect.
- LED 4 will remain solid to indicate successful connection.
- To disconnect press the HOME button for 5 seconds to shutdown the controller.
- To reconnect, press the HOME button.

 NOTE: For any reconnection or resyncing issues, insert a small thin object such as a paperclip into the reset hole on the back of the controller.

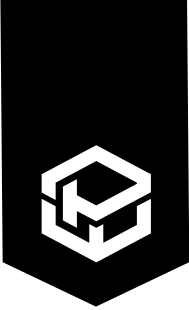

MOBILE GAMING CONTROLLER

INSTRUCTIONS

 
Syncing Instructions Continued

ANDROID GAMES – Android



- Press the X & HOME buttons together.
- LED 3 will flash to indicate pairing mode.
- Within phone settings switch Bluetooth to 'On' & scan for new devices.
- Controller will be named 'GC-PAD.'
- Click the controller name to pair and connect.
- LED 3 will remain solid to indicate successful connection.
- To disconnect press the HOME button for 5 seconds to appropriately shutdown the controller connection.
- To reconnect, press the HOME button.

NOTE: For any reconnection or resyncing issues, insert a small thin object such as a paperclip into the reset hole on the back of the controller.

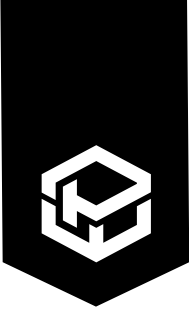

MOBILE GAMING CONTROLLER

 
INSTRUCTIONS

Syncing Instructions Continued

NINTENDO SWITCH – Switch, OLED & Lite

- Press the Y & HOME Buttons together.
- All 4 LED's will cycle through flashes in turn to indicate pairing mode.
- Follow the pairing instructions below on your Nintendo Switch console.
- To disconnect press the HOME button for 5 seconds to shutdown the controller.
- To reconnect, press the HOME button.

1. Select 'Controllers' on your Nintendo Switch™ homepage.

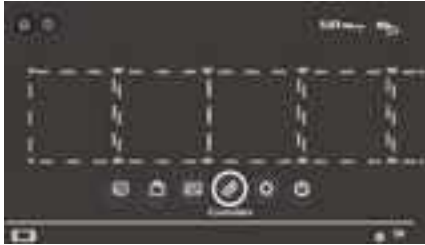


2. Select 'Change Grip/Order'.



 3. Follow instructions on screen to complete connection.



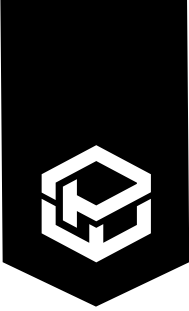

MOBILE GAMING CONTROLLER

 
INSTRUCTIONS

Syncing Instructions Continued


PC CONNECTION – Wired


- Connect the controller to your PC with the USB-C cable.
- Once the controller has been recognised it will display solid light on the applicable LED's to indicate the current input mode.
- Press the HOME button to switch between X-Input & D-Input modes.

X-INPUT – LED'S 1, 2 & 3

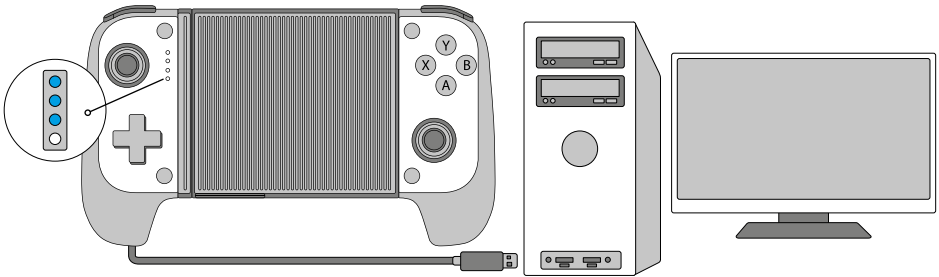

D-INPUT – LED 3 Only

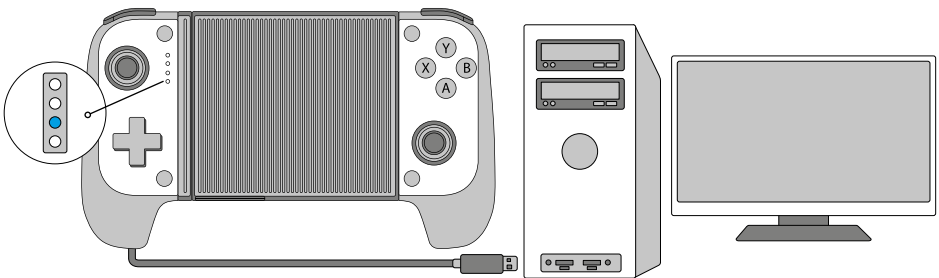 

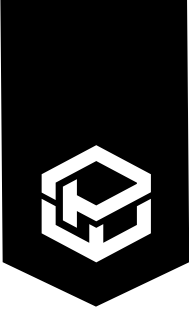 

MOBILE GAMING CONTROLLER

INSTRUCTIONS

KEY CONFIGURATION – Android Custom Game Mode

 
To play games on Android using customised key configuration profiles.

- Install the 'ShootingPlus V3' app on your android device.
- Ensure Bluetooth mode in settings is set to 'On.'
- Press A & HOME Buttons together.
- LED 1 will flash to indicate pairing mode.
- Open the floating window for 'ShootingPlus V3.'
- Click the 'Device' option in the app and connect the controller 'GC-PAD.'
- LED 1 will remain solid to indicate successful connection.
- On the 'ShootingPlus V3' app, enter the game & press START on the controller to display the key configuration menu (example shown below).



- Move the buttons on screen to the positions on the virtual buttons in-game to configure each key to the virtual key actions.
- Tap 'Save' to save the key configuration for the current game.
- Tap 'Close' and begin play using the new key configuration.
- Pressing the SELECT button in game will display key configuration.
- To reset to the default key configuration open the 'ShootingPlus V3' app > Settings > Advanced Settings > Reset Device.

NOTE: After resetting key configuration to default settings, the controller will need to be disconnected and reconnected.

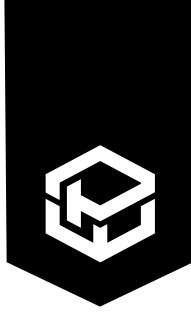

MOBILE GAMING CONTROLLER

INSTRUCTIONS

Available Game Mode Sync Options

Applicable System	IOS 13 & Android	Android		Switch Console	IOS 13 & Android	PC	PS4 & PS3
Working mode	IOS MFI mode	Android Button Custom Game Mode (V3+)	Android Standard HID Mode	Switch Mode	Xbox Wireless Controller Mode		PS4 Controller Mode
Sync Mode	B + HOME	A + HOME	X + HOME	Y + HOME	L1 + HOME	Wired	Wired
Indicator	LED 4	LED 1	LED 3	Determined by Player	LED 1 LED 2 LED 3	D-Input LED 3 X-Input LED 1 + LED 2 + LED 3	LED 4
Callback Mode	HOME Button						

RGB Lighting Settings

- Hold the TURBO + R3 Buttons together to cycle through the available colour modes of the joysticks.
- Hold the TURBO + L3 Buttons together to toggle the ABXY lighting on and off.

 
TURBO Settings

Activating & Disabling Turbo Functionality

- Turbo can be enabled on the following keys – A / B / X / Y / L1 / L2 / R1 / R2.
- To activate Turbo on one of the above keys hold the TURBO button and the selected key simultaneously.
- Repeat the same step again to disable Turbo from the selected key.

Adjusting Turbo Speed

- Press the TURBO button and the corresponding directional pad button simultaneously.
- TURBO + Direction Up; Fastest Speed (approx. 16 x second).
- TURBO + Direction Right; Medium Speed (approx. 8 x second).
- TURBO + Direction Down; Slower Speed (approx. 4 x second).

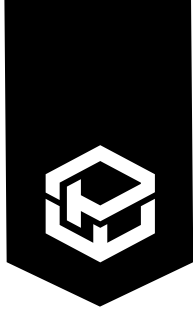

MOBILE GAMING CONTROLLER

INSTRUCTIONS

Product Specifications

Battery	600mAh Rechargeable Battery
Charge Current	5V 350mA
Charge Time	2 – 2.5 Hours
Bluetooth	Bluetooth 5.0
Max Distance	8M
Frequency	2.402 ~ 2.480Ghz
Platforms	iOS 13+, Android, PC, Nintendo Switch

Product Care and Safety

- Keep your user manual for future reference.
- Use this device solely for its intended purposes.
- Please use the included 5V / 1A cable. The device is designed for use with a 5V 1A power current. Device performance may be impaired with insufficient power input.
- For indoor use only.
- Keep away from hot surfaces and naked flames.
- Do not expose this product to any liquids.
- Do not use external heating equipment to dry device.
- When not in use, store in a cool, dry environment away from direct sunlight.
- Do not apply force or put heavy objects onto the product.
- If the product is damaged, broken or immersed in water, stop use immediately.
- Do not attempt to repair, modify or disassemble the product.
- Clean with a soft, dry cloth to prevent dirt build-up. Do not use chemical solvents, detergents or alcohol.
- Keep out of reach of small children.