



POWERWAVE
ACCESSORIES

 
SWITCH PRO GRIP CONTROLLER

INSTRUCTIONS

L Button

Front Button Layout

R Button

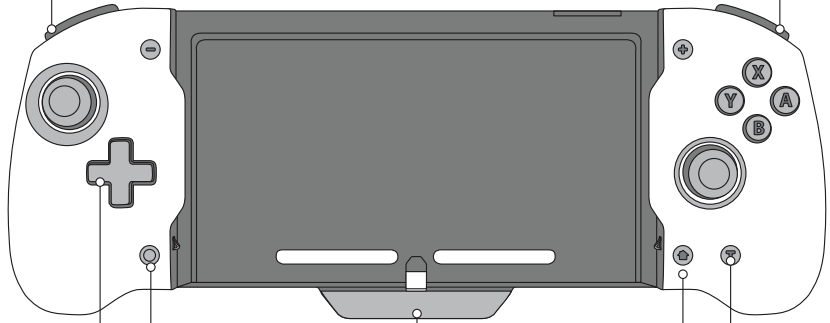

D-Pad

Turbo Button

Screen Capture
Button

Type C Charging
Power Interface

Home Button

L Button

Back Button Layout

R Button

ZL Button

ZR Button





 
POWERWAVE
ACCESSORIES

SWITCH PRO GRIP CONTROLLER


INSTRUCTIONS

How to Connect

1. Start up the Switch console.
Enter "System Settings". Select "Controllers and Sensors". Ensure the "Pro Controller Wired Communication" setting is turned On.

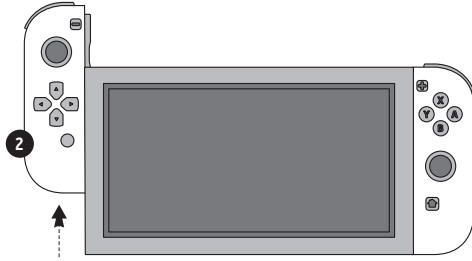

 2. Remove the Joy-Cons from your console.
3. Position the console with the USB Type-C port downwards. Line up the Switch tracks with the tracks on the Grip and carefully slide the console into the Pro Grip Controller until it snugly clicks into the USB Type-C charging plug.

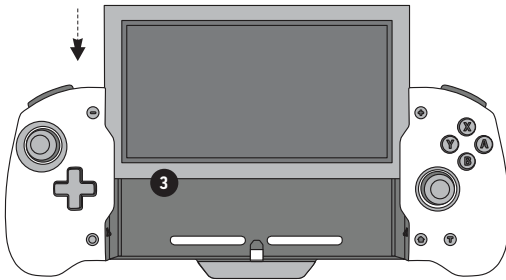


- a. Be careful not to touch the joysticks or any other buttons when plugging in the console.

4. With the console on, Press A on the Pro Grip Controller and it will connect.

5. To finalise setup, we recommend you calibrate the Control Sticks (joysticks) and Motion controls. These settings can be found under "Controllers and Sensors" in "System Settings".

6. To remove, gently use two hands to push the bottom corners of the console upwards, then slide the console away from the Grip.

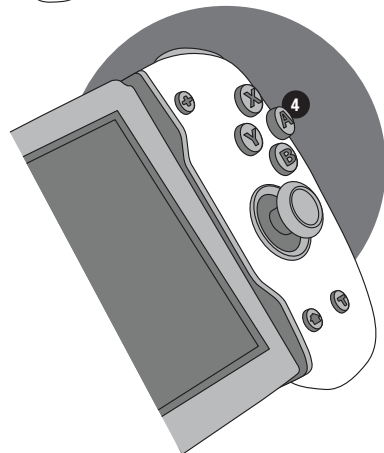



POWERWAVE
ACCESSORIES

SWITCH PRO GRIP CONTROLLER

 
INSTRUCTIONS

Turbo Settings

The Switch Pro Grip Controller includes 2 settings of turbo mode:
Semi-Automatic and Full-Automatic.

Turbo mode can be set on the following buttons:

A key, B key, X key, Y key, + key, - key, L key, R key, ZL key, ZR key, Directional Pad (up, down, left and right), L3 key (left 3D joystick press key) and R3 (right 3D joystick press key).

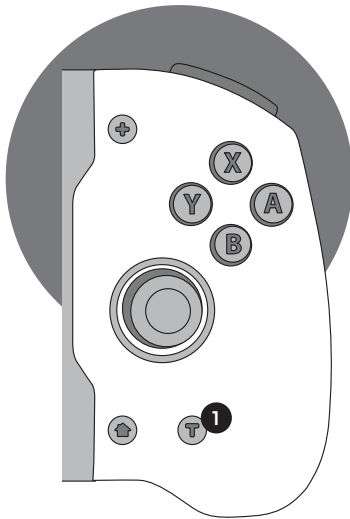

Semi-automatic Turbo function

With semi-automatic turbo function, you can set a select button to automatically activate when it is held down.

1. Press and hold the turbo key.
2. Press the button to apply turbo to.

 
Semi-automatic turbo can be set to multiple buttons at a time.

Full-automatic Turbo function

With full-automatic turbo function, you can select a button to automatically activate when it is pressed once.

1. Press and hold the turbo key
2. Press the button to apply turbo to
3. Repeat steps 1 & 2 again and turbo will start immediately
4. To turn off, press and hold the turbo key and the button which has had turbo applied to.

Full-automatic turbo can only be set to one button at a time.

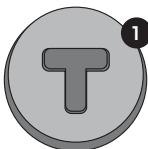

Clear Turbo function of a single button

1. Press and hold Turbo plus the button which you want cleared

Clear Turbo function of all keys

 
 
1. Press and hold the Turbo key for 10 seconds.



POWERWAVE
ACCESSORIES

SWITCH PRO GRIP CONTROLLER

INSTRUCTIONS

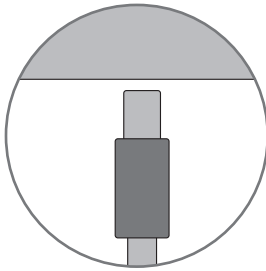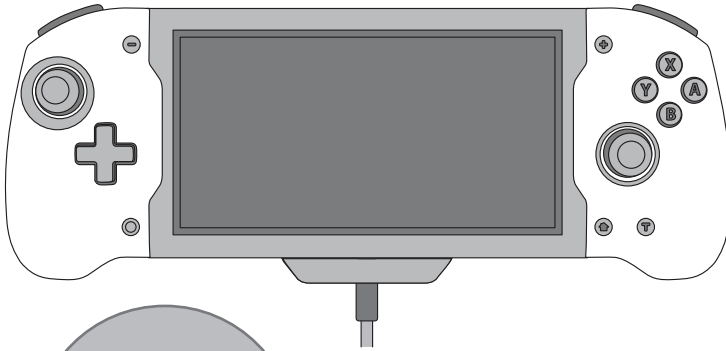

Play and Charge

Pass through charging is supported. Plug in a USB Type-C cable into the charging port of the Pro Grip Controller and the USB Type-A end into a compatible 15v power adapter or USB power device. The console screen will indicate when console is charging.

Technical Specifications

Input voltage: 15V, 1.5A. Standard PD protocol power adapter is required.

Working Temperature: -20 ~40 °C

Storage Temperature: -40 ~70 °C

Heat dissipating method: Natural air cooling.

This product does not support NFC (for Amiibo), IR or HD rumble (required for some games).

Product Care

If the product gets wet or damaged, stop using immediately.

Keep clean by wiping with a soft dry cloth. Do not use water, alcohol or detergent.

Keep out of direct sunlight.

Do not attempt to modify or repair.

Do not apply strong impact or weight.