



# CONSOLE DISPLAY STAND



## Contents

PRODUCT OVERVIEW .....	2
LAYOUT .....	2
OPERATING INSTRUCTIONS .....	2
CONTENTS .....	3
PRODUCT CARE AND SAFETY .....	3



# GAME CARD CASE

## INSTRUCTIONS

### Product Overview

Secure and display your Nintendo Switch™ Console with the Powerwave Console Display Stand. The legs allow the stand to be adjusted to three different incline levels to suit your preference while allowing a charging cable access to the bottom of the console.

### Layout



### Operating Instructions

1. Unfold the adjustable leg so it rests against a ridge on the base of the display stand
2. Fold the console holding ledge down to provide a resting spot for your console



# GAME CARD CASE

## INSTRUCTIONS

### Contents

1x Console Display Stand

### Product Care and Safety

- Keep your user manual for future reference.
- Use this device solely for its intended purposes.
- For indoor use only.
- Keep away from hot surfaces and naked flames and liquids.
- When not in use, store in a cool, dry environment away from direct sunlight.
- Do not apply force or put heavy objects onto the product.
- If the product is damaged, broken or immersed in water, stop use immediately.
- Do not attempt to repair, modify or disassemble the product.
- Clean with a soft, dry cloth to prevent dirt build-up. Do not use chemical solvents, detergents or alcohol.
- Keep out of reach of small children.