



GAME CARD CASE



Contents

PRODUCT OVERVIEW	2
CONTENTS	2
PRODUCT CARE AND SAFETY	2



GAME CARD CASE

INSTRUCTIONS

Product Overview

Safely store 24 Nintendo Switch™ or Switch 2 Cartridges and microSD Cards with the Powerwave Game Card Case. Magnetic closure keeps your case securely shut and the rubber interior keep your games safely cushioned. The bonus microSD card storage slot behind each card protects your important data. The sleek and minimalist hard-shell design is the perfect storage solution for your favourite games whilst on the go or at home.

Contents

1x Game Card Case

Product Care and Safety

- Keep your user manual for future reference.
- Use this device solely for its intended purposes.
- For indoor use only.
- Keep away from hot surfaces and naked flames and liquids.
- When not in use, store in a cool, dry environment away from direct sunlight.
- Do not apply force or put heavy objects onto the product.
- If the product is damaged, broken or immersed in water, stop use immediately.
- Do not attempt to repair, modify or disassemble the product.
- Clean with a soft, dry cloth to prevent dirt build-up. Do not use chemical solvents, detergents or alcohol.
- Keep out of reach of small children.