



POWERWAVE

ACCESSORIES

INSTRUCTIONS

PREMIUM CARRY CASE



Contents

PRODUCT OVERVIEW	2
CONTENTS	2
PRODUCT CARE AND SAFETY	2



PREMIUM CARRY CASE

INSTRUCTIONS

Product Overview

Protect your Nintendo Switch™ 2 Console with the Powerwave Premium Carry Case. The durable material protects your console from everyday wear and tear while on the go and the soft internal fabric cushions your console to ensure it stays protected when in the case.

Stay organised with two cartridge sleeves providing storage for up to 30 game cartridges. The internal mesh pocket includes a zipper to ensure your extra accessories stay in place during transit.

Contents

1x Premium Carry Case

Product Care and Safety

- Keep your user manual for future reference.
- Use this device solely for its intended purposes.
- For indoor use only.
- Keep away from hot surfaces and naked flames and liquids.
- When not in use, store in a cool, dry environment away from direct sunlight.
- Do not apply force or put heavy objects onto the product.
- If the product is damaged, broken or immersed in water, stop use immediately.
- Do not attempt to repair, modify or disassemble the product.
- Clean with a soft, dry cloth to prevent dirt build-up. Do not use chemical solvents, detergents or alcohol.
- Keep out of reach of small children.