



POWERWAVE
ACCESSORIES

PREMIUM STARTER PACK

INSTRUCTIONS



Contents

PRODUCT OVERVIEW	2
CONTENTS	2
PRODUCT CARE AND SAFETY	3



PREMIUM STARTER PACK

INSTRUCTIONS

Product Overview

The Powerwave Premium Starter Pack includes all your essential products in one package. Includes -

Premium Carry Case:

Protect your Nintendo Switch™ 2 Console with the Powerwave Premium Carry Case. The durable material protects your console from everyday bumps, drops and scratches whilst on the go and the soft, internal fabric cushions your console to ensure it stays protected when in the case.

Stay organised with two cartridge sleeves provide storage for up to 30 game cartridges. The internal mesh pocket includes a zipper to ensure your extra accessories stay in place during transit.

Tempered Glass Screen Protector with Alignment Tray:

The Powerwave Glass Screen Protector with Alignment Tray provides complete protection for your Nintendo Switch™ 2 Console Screen.

The Anti-Bacterial coating keeps your console screen clean and Anti-Blue Light effect prevents eye strain during your gaming sessions. While the included alignment tray ensures easy and precise application onto your console.

Compact Dual Charging Stand:

The Powerwave Compact Dual Charging Stand is the perfect pocket-sized charging solution for use at home or on the go. Featuring a folding kickstand, this charger can be positioned upright or flat, allowing for charging in either position. LED indicators provide clear visibility of the charging status.

Cleaning Cloth:

Keep your screen streak and fingerprint free with the cleaning cloth.

Contents

- 1x Premium Carry Case
- 1x Tempered Glass Screen Protector
- 1x Alignment Tray
- 1x Compact Dual Charging Stand
- 2x Alcohol Wipes (1x Wet & 1x Dry)
- 1x USB-C Charging Cable
- 1x Cleaning Cloth



PREMIUM STARTER PACK

INSTRUCTIONS

Product Care and Safety

- Keep your user manual for future reference.
- Use this device solely for its intended purposes.
- For indoor use only.
- Keep away from hot surfaces and naked flames and liquids.
- When not in use, store in a cool, dry environment away from direct sunlight.
- Do not apply force or put heavy objects onto the product.
- If the product is damaged, broken or immersed in water, stop use immediately.
- Do not attempt to repair, modify or disassemble the product.
- Clean with a soft, dry cloth to prevent dirt build-up. Do not use chemical solvents, detergents or alcohol.
- Keep out of reach of small children.