



**POWERWAVE**  
A C C E S S O R I E S

# CARRY CASE

## INSTRUCTIONS



### Contents

PRODUCT OVERVIEW .....	2
USING YOUR KICKSTAND .....	2
CONTENTS .....	2
PRODUCT CARE AND SAFETY .....	2



# CARRY CASE

## INSTRUCTIONS

### Product Overview

Keep your Xbox ROG Ally or Ally X safe and organised with the Powerwave Carry Case. Built from durable materials, the custom-molded interior cutout perfectly fits the shape of your handheld while the dedicated charger slot ensures you're always ready to play.

A zippered mesh pocket provides extra storage space for small accessories and the protective sleeve doubles as a convenient foldable kickstand, perfect for playing with a controller.

Built for durability and portability, this case ensures your Xbox ROG Ally or Ally X is protected wherever you take it.

### Using Your Kickstand

1. Remove your handheld from the case
2. Find the long fabric strap and attach the Velcro end to the Velcro tab on the front of your protective sleeve
3. Raise your protective sleeve so the fabric strap is taught and rest your handheld against the strap

### Contents

- Carry Case

### Product Care and Safety

- Keep your user manual for future reference.
- Use this device solely for its intended purposes.
- For indoor use only.
- Keep away from hot surfaces and naked flames and liquids.
- When not in use, store in a cool, dry environment away from direct sunlight.
- Do not apply force or put heavy objects onto the product.
- If the product is damaged, broken or immersed in water, stop use immediately.
- Do not attempt to repair, modify or disassemble the product.
- Clean with a soft, dry cloth to prevent dirt build-up. Do not use chemical solvents, detergents or alcohol.
- Keep out of reach of small children.