



POWERWAVE
ACCESSORIES
INSTRUCTIONS

**PRO CHARGING
STATION**



Contents

PRODUCT OVERVIEW 2

OPERATING INSTRUCTIONS 2

CONTENTS 2

PRODUCT CARE AND SAFETY 2



PRO CHARGING STATION

INSTRUCTIONS

Product Overview

Conveniently charge your Switch 2 Pro controller and two Joy-Con Controllers™ with the Powerwave Pro Charging Station. Attach the included pogo-pin adapter for easy placement on the charger.

Operating Instructions

- Connect your Charging Station to power using the included USB-A cable.
- Connect your Joy-Cons to the Charging Station, ensuring the left and right Joy-Cons are on the correct sides, indicated by the “-” and “+” symbols.
- Locate the Pogo Pins on the bottom of your Charging Station, remove one from its holder and inset into the USB-C Port on your controller.
- To begin charging simply place your controller onto the Charging Station. The magnetic Pogo Pin will connect to the charging port and start charging.
- A red light indicates the Controller or Joy-Cons are charging. A green light indicates the Controller or Joy-Cons are fully charged.

Contents

- 1x Charging Station
- 2x Pogo Pins

Product Care and Safety

- Keep your user manual for future reference.
- Use this device solely for its intended purposes.
- For indoor use only.
- Keep away from hot surfaces and naked flames and liquids.
- When not in use, store in a cool, dry environment away from direct sunlight.
- Do not apply force or put heavy objects onto the product.
- If the product is damaged, broken or immersed in water, stop use immediately.
- Do not attempt to repair, modify or disassemble the product.
- Clean with a soft, dry cloth to prevent dirt build-up. Do not use chemical solvents, detergents or alcohol.
- Keep out of reach of small children.