




POWERWAVE
ACCESSORIES

POWERWAVE SNAPGO MINI

USER MANUAL

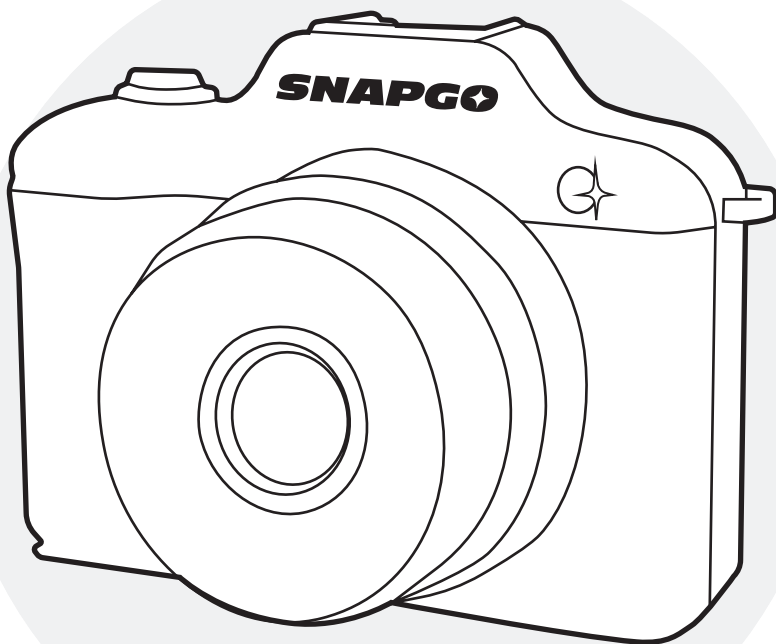



POWERWAVE
ACCESSORIES

POWERWAVE SNAPGO MINI

USER MANUAL

Contents

PRODUCT OVERVIEW 2

BUTTON LAYOUT 2

USING YOUR CAMERA 3

CONNECTING TO OTHER DEVICES 3

SETTING DATE & TIME 4

INDICATOR LIGHT 5

CONTENTS 5

SPECIFICATIONS 5

TROUBLESHOOTING 6

PRODUCT CARE & SAFETY 7



POWERWAVE
ACCESSORIES


POWERWAVE SNAPGO MINI

USER MANUAL

Product Overview

The SnapGo Mini is a compact HD digital camera small enough to clip onto a bag, keychain or lanyard. It shoots photos and video, records audio and connects to your phone or computer for easy file transfer.

Button Layout

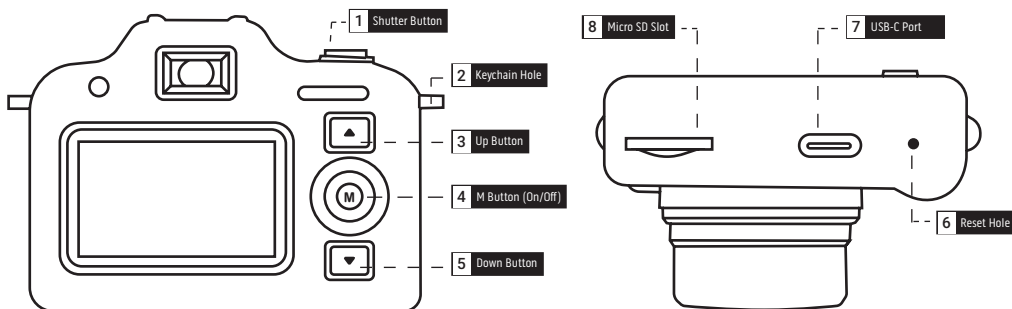

1. **Shutter Button:** Take photos, start/stop video & audio recording (Top)
2. **Keychain Hole:** Attach keychain or lanyard (Top corners)
3. **Up Button:** Toggle silent mode (short press), Fill light (long press). (Right side)
4. **M Button (On/Off):** Power on/off, switch between Photo and Video modes (Right side)
5. **Down Button:** Cycle through filter effects (Right side)
6. **Reset Hole:** Press with a pin to force reset (Bottom)
7. **USB-C Port:** Charging, phone & computer connection (Bottom)
8. **Micro SD Slot:** Memory card slot (Supports up to 128GB) (Bottom)



POWERWAVE
ACCESSORIES

POWERWAVE SNAPGO MINI

USER MANUAL

Using Your Camera

Charging:

Before first use, fully charge your SnapGo Mini. The red indicator light will stay on while charging and turn off when complete.

Power On/Off:

On: Long press the M Button for 3 seconds. The blue indicator lights up.

Off: Long press the M Button for 2 seconds. The blue indicator turns off. The camera will automatically power off after 3 minutes of inactivity.

Memory Card:

The pre-installed MicroSD Card is located in the SD card slot on the bottom of the camera. Your SnapGo Mini Camera supports MicroSD Cards up to a 128 GB. The camera will not take photos, videos or record audio without a memory card inserted.

Taking Photos:

Your camera will start on Photo mode by default. You will see a camera icon in the top-left corner of the screen.

1. Frame the shot on the LCD screen.
2. Press the Shutter Button once.
3. The flash will fire and you'll hear the shutter sound confirming the photo was taken.

Recording Video:

From Photo mode, press the M Button once to switch to Video mode. The icon in the top-left corner will change to a video camera.

1. Press the Shutter Button to start recording. A timer appears on screen.
2. Press the Shutter Button again to stop and save the video file.

Recording Audio:

The SnapGo Mini can also record audio-only files without using the camera.

1. From standby, long press the Shutter Button to enter Audio Recording mode. Recording will start immediately.
2. Short press the Shutter Button to stop and save the recording.
3. Press the M Button to exit Audio mode.

Viewing Your Photos, Videos and Audio:

1. From Photo mode press the M Button twice, you will now see your latest photo, video or audio file.
2. Press the Up/Down Buttons to navigate through your photos, videos or audio files.
3. Press the Shutter Button to play video or audio file.



POWERWAVE
ACCESSORIES

POWERWAVE SNAPGO MINI

USER MANUAL

Connecting to Other Devices

Computer (USB):

With a Memory Card inserted, connect the camera to a computer via USB-C. It will appear as a removable Drive. You can then browse, copy, or delete files directly.

Android Phone (OTG):

The included OTG (USB On-The-Go) lets you connect the camera directly to an Android phone using a USB-C adapter. This gives you instant access to your photos and videos without a computer.

1. Connect the camera to your phone using the included USB-C OTG adapter.
2. The camera powers on automatically and shows a USB icon on screen.
3. Open your phones file manager and look for a folder called USB Drive (name may vary slightly by phone).
4. Browse the PHOTO, VIDEO and AUDIO folders to view, copy or share your files.

IPhone (USB-C):

You can transfer files from your SnapGo Mini directly to any iPhone with a USB-C port (iPhone 15 and later).

1. Connect a USB-C cable from your iPhone to the camera.
2. Open the Files app.
3. Navigate back to browse.
4. Under Locations, find the connected drive (name may vary).

Note: Use a standard USB-C cable with data transfer capability. The OTG adapter is not compatible with iPhone.

OTG Not Working?

Make sure your memory card is formatted. An unformatted card can prevent the phone from recognizing the camera.

Cards over 64 GB may cause recognition issues on some phone models.

Some Android phones require OTG to be enabled in Settings before it will work.

Every operating system shows the folder differently.



POWERWAVE SNAPGO MINI

USER MANUAL

Contents

1x SnapGo Mini Camera
1x USB-C to USB-C On-The-Go Dongle
1x MicroSD Card (pre-installed)
1x Keychain
1x Wrist Strap Lanyard

Indicator Light

The LED on top of the camera communicates the device status:

Indicator	Meaning
Red (Steady)	Charging
Red Off	Fully Charged
Blue (Steady)	Powered on
Blue Off	Powered Off
Flash Fires	Photo Taken

Setting the Date & Time

The SnapGo Mini can stamp dates into your photos and videos. To set the clock, you'll need to edit a text file on the memory card via a computer.

1. Insert the memory card and connect the camera to a computer via USB-C.
2. Open the camera's drive and find the file called time.txt in the root folder.
3. Edit the file using this exact format:

20260402120000 Y
YYYY MM DD HH MM SS Flag
Y = show date/time watermark N = hide watermark

4. Save the file and restart the camera. The clock will sync to the time you entered.



POWERWAVE SNAPGO MINI

USER MANUAL

Specifications

Specification	Detail
Video Resolution	1080p HD 30fps (AVI format)
Photo Resolution	1920x1080
Screen	0.96" LCD
Storage	Micro SD/TF card, up to 128 GB Photo
Battery	200 mAh lithium polymer (built-in)
Charging	USB-C
Dimensions	51 x 38 x 33 mm
Connectivity	USB-C (data + charge) · OTG Dongle (Android)
Other	LED fill light · Built-in speaker · Microphone

Troubleshooting

Problem	Solution
Won't turn on	Battery may be flat. Charge fully via USB-C, then try again.
Frozen/Unresponsive	Insert a pin into the Reset hole on the bottom and press briefly. Then power on as normal.
Photos/Video not saving	Check that a memory card is inserted and has free space. Try a different card if issues persist.
Phone doesn't recognise camera via OTG	Ensure OTG is enabled on your phone. Try reformatting the card (back up files first). Cards over 64 GB may not work on all phones.
Computer doesn't detect the camera	Try a different USB-C cable. Make sure the camera is powered on and has a card inserted.



POWERWAVE SNAPGO MINI

USER MANUAL

Product Care and Safety

- Keep your user manual for future reference.
- Use this device solely for its intended purposes.
- Keep away from hot surfaces and naked flames and liquids.
- When not in use, store in a cool, dry environment away from direct sunlight.
- Do not apply force or put heavy objects onto the product.
- Use a soft cloth to clean the lens and screen.
- Keep the USB-C port free from dust and debris.
- If the product is damaged, broken or immersed in water, stop use immediately.
- Do not attempt to repair, modify or disassemble the product.
- Clean with a soft, dry cloth to prevent dirt build-up. Do not use chemical solvents, detergents or alcohol.
- The SnapGo Mini contains a built-in lithium polymer battery. Do not dispose of this product in general household waste.
- Keep out of reach of small children.