



SWITCH SPORTS ACCESSORIES BUNDLE


INSTRUCTIONS




The Powerwave Switch Sports Accessories Bundle is designed to be used with either the Left or Right Joy-Con™.

Pack includes:


- 2 x** Golf Clubs
- 2 x** Tennis Rackets
- 2 x** Swords
- 1 x** Leg Strap
- 6 x** Wrist Straps




Wrist Strap

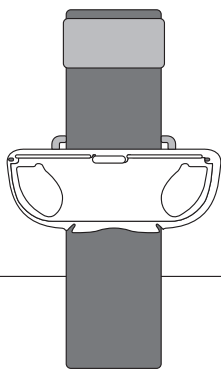


Leg Strap

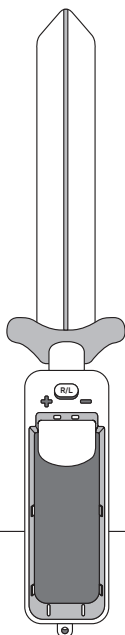

Sword

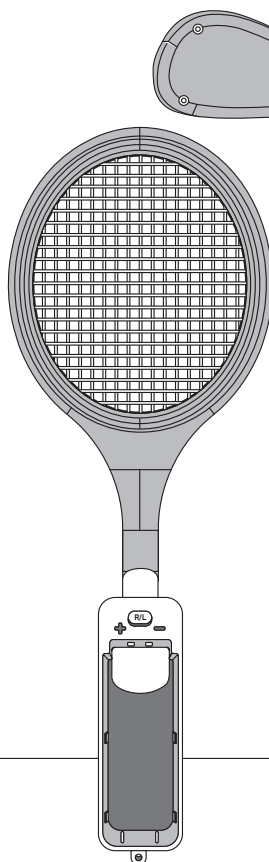

Tennis Racket

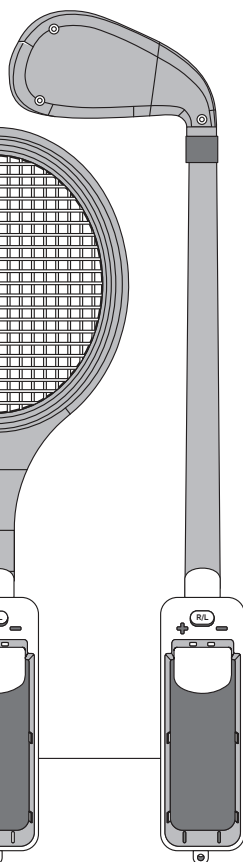


Golf Club



SWITCH SPORTS ACCESSORIES BUNDLE


INSTRUCTIONS

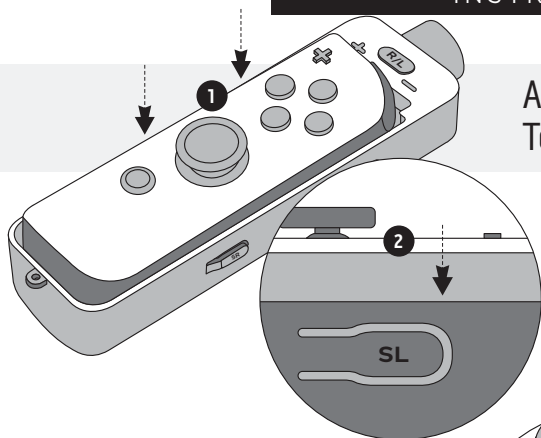



Assembling the Golf Clubs, Tennis Rackets & Swords.

1. Align the + or – button on the Joy-Con™ controller with the + or – mark on the handle.
2. Gently press the Joy-Con controller down into the handle until it is firmly in place.

3. Attach the wrist strap cord to the handle by feeding it through the top hole.
4. To remove the Joy-Con™ gently push out the controller from the back using the open hole in the back of the handle.

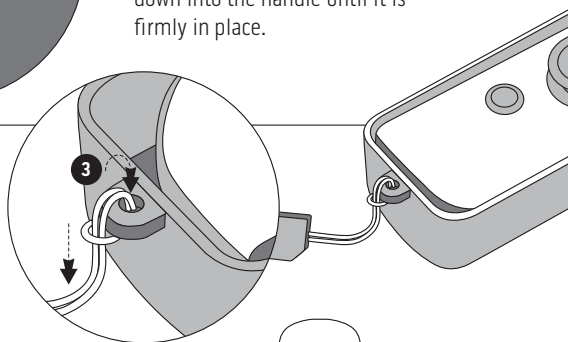

Note: the R/L pass-through button on the handle allows you to press the R/L button on the Joy-Con™ controller.

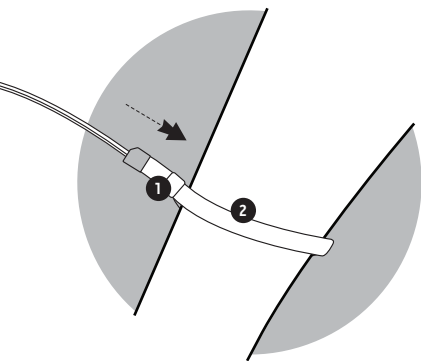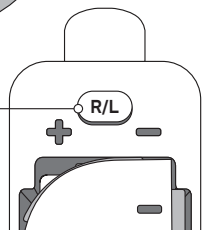

Important

When using the Joy-Con™ wirelessly, it is recommended that you use the wrist strap.

1. Place your hand through the wrist strap and hold the Joy-Con™ firmly.
2. Tighten the wrist strap onto your wrist by sliding the strap lock towards your arm. Be careful not to over-tighten to avoid discomfort.






SWITCH SPORTS ACCESSORIES BUNDLE

INSTRUCTIONS

Assembling the Leg Strap

1. Place the Joy-Con™ controller in the Leg Strap's handle with the controls facing outward. Gently press the Joy-Con™ down into the handle until it is firmly in place.
2. Wrap the Leg Strap over your thigh with the top of the Joy-Con™ facing towards your body.

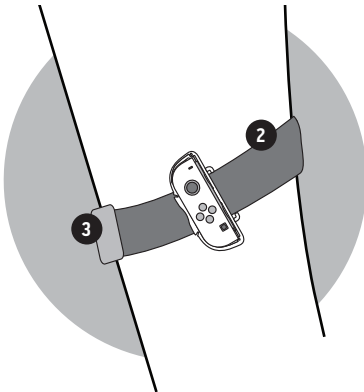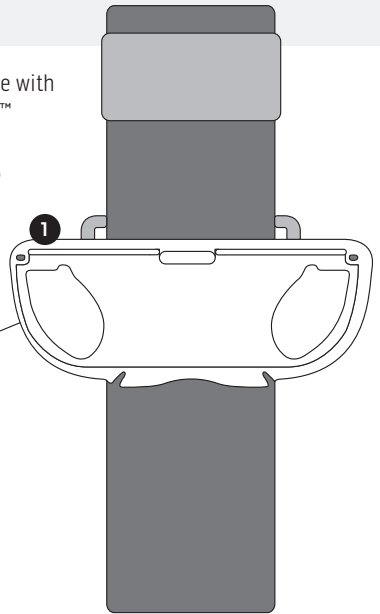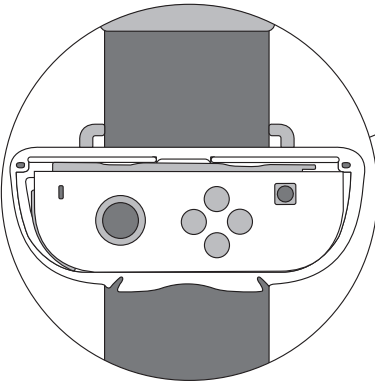

3. Tighten the Leg Strap by tugging the end with the Velcro tip until firm and fasten. Be careful not to over tighten to avoid discomfort.
4. To remove the Joy-Con™ gently push out the controller from the back using the open hole in the back of the handle.



POWERWAVE
ACCESSORIES

SWITCH SPORTS ACCESSORIES BUNDLE

INSTRUCTIONS

Product Care and Safety

- Keep your user manual for future reference.
- Use the products solely for their intended purposes. For indoor use only.
- When not in use, store in a cool, dry environment away from direct sunlight.
- Keep away from hot surfaces and naked flames.
- Do not use excessive force on the products.
- Do not attempt to repair, modify or disassemble the products.
- Clean the products with a soft, damp cloth to prevent dirt build-up. Do not use chemical solvents, detergents or alcohol.
- Clean the leg strap by soaking in lukewarm water with a neutral detergent, rinse well and wipe away excess moisture with a towel. Hang to dry in a well-ventilated area in the shade.
- Do not heat or tumble dry the products.
- Keep out of reach of small children.